




Installation Guide

RAW PINE SHIPLAP


Primed, Raw and Cedar tongue and groove siding can be installed horizontally or vertically. In horizontal application, start at the bottom and work up with the groove edges facing downwards. Siding 6" and 8" wide can be blind nailed through the tongue. Face nailing is an option but is not required. Nails must penetrate 1 ¼" inches into solid wood.

In vertical application, start at one corner with grooved edge toward the adjacent wall. Use a level or plumb line to ensure that the first board is installing plumb. The grooved edge of the first board may have to be trimmed to ensure flush fit. Siding is nailed to horizontal blocking lines installed between studs or to furring strips. As with horizontal installation, pieces 6" and 8" can be blind nailed. **Nails to be placed into blocking/furring strips every 24" at minimum.**

WALL INSTALLATION

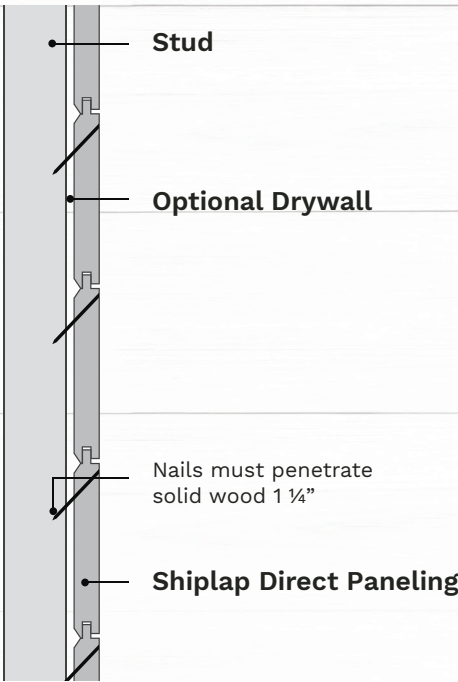

CEILING INSTALLATION

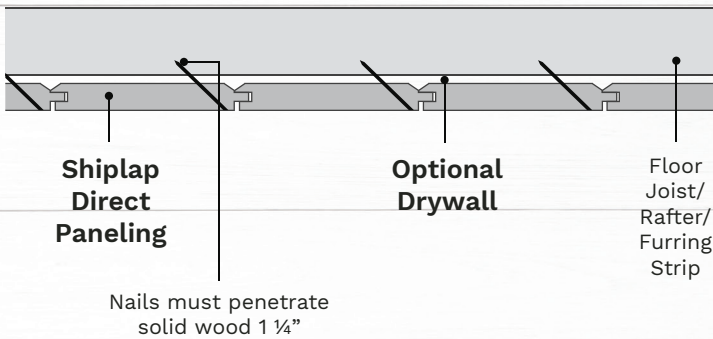

Recommended Fastner = Minimum 16 Gauge Finish Nail